
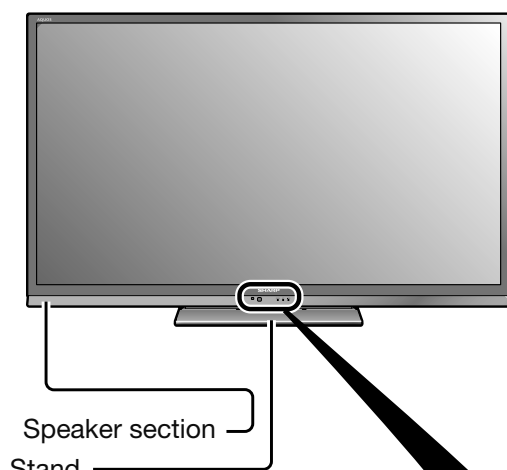


English Guide

Part Names

- The numbers shown in the  symbols are the page numbers where part functions and/or use are explained in Japanese.

Front view





170·171~172

Ambient illumination
sensor window **52**

Remote sensor window **20**

- When using the remote control, point its head toward this window.

Right side view

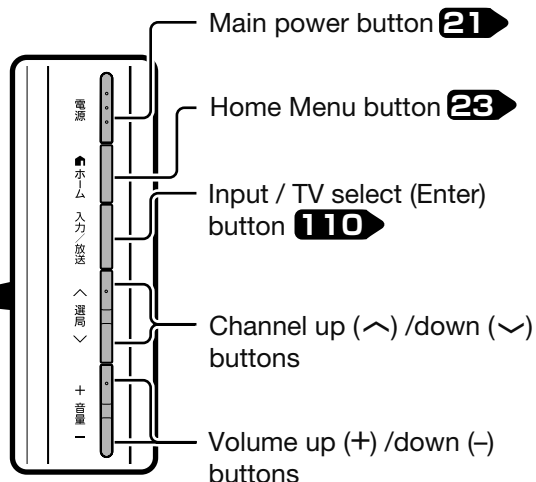

Timer program indicator



37·59·84~85·104~105

Recording indicator

82~83

Power indicator **21**

Left side view

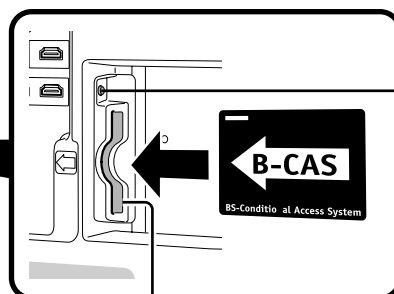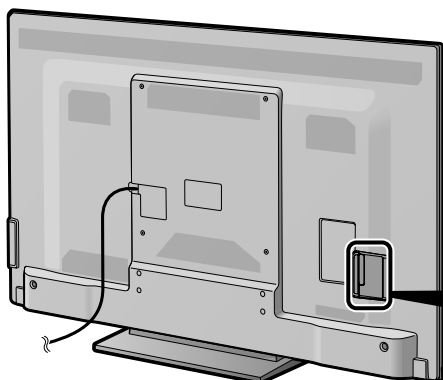

B-CAS card slot **176**

Back view

AV in 5 (PC)

188

AV in 4 (D5) /Audio out

112・184・186・187

LAN jack

(10BASE-T/100BASE-TX)

121・147

USB terminal

73・124・164・231

PC input (audio)

117・188・189

Digital audio
output jack (optical)

183・187

Connect a Blu-ray
Disc player,
AV amplifier, etc.

AV in 1・2 and 3 (HDMI)


**108・182・183・
184・185・189**

BS-CS 110 antenna
input terminal

178~181

Terrestrial antenna
input terminal

178~181

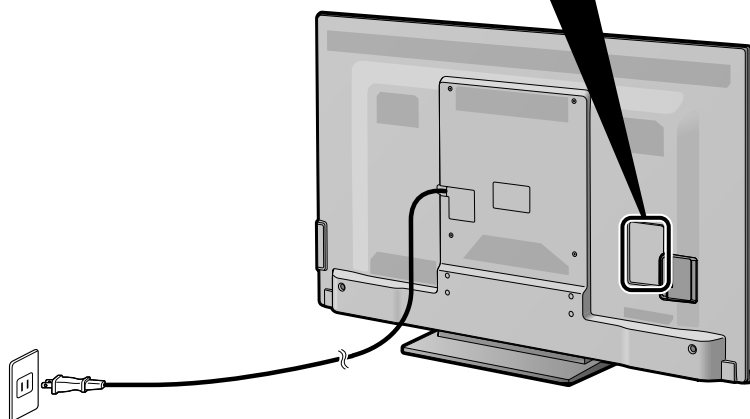

はじめに
お読みください

電源を入れる／
基本の使いかた

テレビを見る／
便利な使いかた

USBハードディスク
を「ないで録る」見る

ファミリーで使う／
レコタイやパソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や素子)

English
Guide

Remote Control Unit

Active/Standby **21**

Press to engage the TV set in the active or standby mode.

Caption **42**

Press to display, select, or turn off captions when watching a digital program with captions.

Freeze **41**

Press to freeze the picture.

Terrestrial digital select **26**

BS select **26**

CS select **26**

When selecting the CS digital channel for the first time. **27**

Mute **26**

Press to mute audio.

Volume up (+)/down (-) **26**

Press to adjust the volume.

データ連動

Linked data broadcast **28・150**

Press to call the data broadcast linked with the current digital TV program.

AVボジション

AV mode select **47**

Press to select the picture/sound setting that best matches the current program.

録画リスト

Recording list **91**

Press to display a list of programs recorded onto a USB HDD or AQUOS recorder.

ファミリンク

Familink **79・101・108**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

番組表 EPG **31・84・104**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

番組情報

Program info **41**

Press to display detailed information on the current digital program.

Finish

Press to finish menu operation, etc.

Recording **82~83・97・operation 102~103**

Press to record onto a USB HDD or AQUOS recorder.

Playback **91・92・operation 106**

Press to play a program recorded onto a USB HDD or AQUOS recorder.

オフタイマー

Sleep timer **57**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

画面表示

Display

44・45・229
Press to display or turn off the channel call, etc.

セーブモード

SAVE mode **65**

Press to change to the SAVE mode.

インフォメーション

Information **25**

Press to display the AQUOS Infomation.

Channel select **26**

• Press to select a channel.

インターネット

Internet **135・143・145**

150・152
Press to connect the internet.

チャンネル

Channel up (^)/down (v) **26・29**

Press to select channels in the ascending or descending order.

入力切替

Input select **110・115・156**

Press to select the input.

ホーム

Display the "Home" Menu **23**

Press to start some useful operations of the TV.

ツール

Display the Tool Menu **23**

Cursor (up, down, left, right) **23**

Use to select a menu item, column, etc.

Enter/Confirm **23**

Press to confirm a selected setting or menu item.

Return

Press to go back to the previous screen.

青 赤 緑 黄

Color **28・32・70**

Use to operate EPGs and data program screens.

2画面

Split screen **38~39**

Press to switch between the split screen mode and the normal screen mode.

操作切替

Operable screen **40**

Press to switch the operable screen when the TV set is in the split screen mode.

映像切替

Picture select **42**

Press to select the desired picture when watching a digital multi-picture program.

音声切替

Audio select **42**

Press to select the audio.

To open the cover

Hold the cover by the projections on both sides and lift upwards.



Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



1

Press
ホーム
and
select
with



Select “設定” (Setup) on
the Home menu.

ホームメニューから「設定」
を選ぶ



2

Select
with



Select “ (視聴準備)”
(View Setting).

「 (視聴準備)」を選ぶ



3

Select
with



Press



Select “Language(言語)”.
「Language(言語)」を選ぶ



4

Select
with



Press



Select “English”.
「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5


Press



Finish this operation.
終了する

◇ おしらせ ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

はじめに
お読みください

電源を入れる／
基本の使いかた

テレビを見る／
便利な使いかた

USBハードディスク
をつないで録る・見る

ファミリンクで使う／
レコタイやパソコンをつなぐ

インターネット／
ホームネットワーク

設置・接続・
受信設定

故障かな？／
エラーメッセージ

お役立ち情報
(仕様や素子)

English
Guide